


Emergency Procedures

In case a **PRESSURE RELIEF BLOWS**

1. Calmly move upwind of COUPP: Towards the end of Drift J or towards the Cube Hall.
2. Guard Drift F between the air handlers and COUPP.
3. Inform the Lab Coordinator of the leak.
4. Observe the condition of the area if possible and await further instruction.

In case the **EXPERIMENT IS DAMAGED**

5. Turn off UPS by pushing power button on front panel

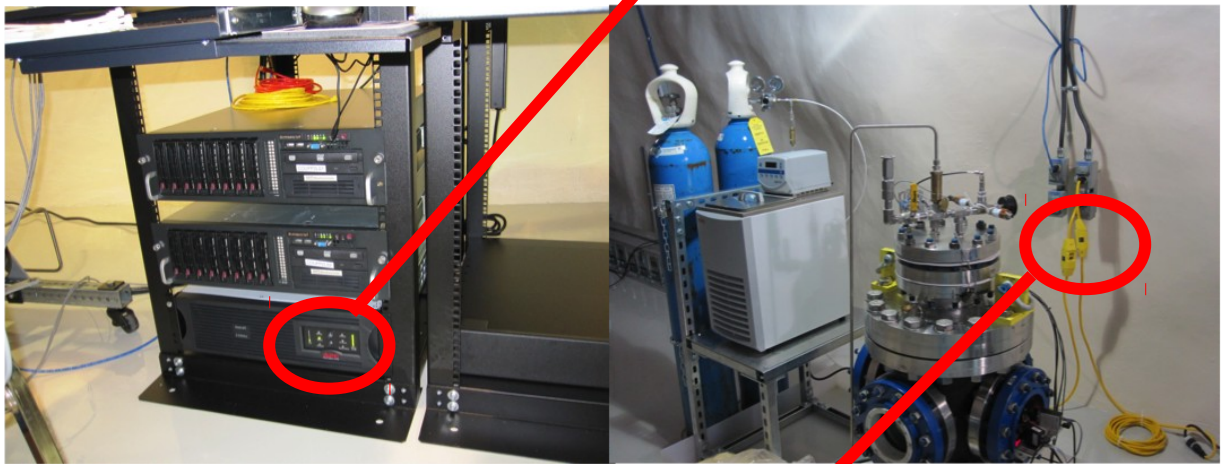

6. Pull both labelled 20A power cords from the wall, or turn off breakers 413PP23BR38 and 413PP23BR40

Contact:

Mike Crisler cell: (630) 276-8705, work: (630) 840-4099

Jeter Hall cell: (801) 735-7433, work: (630) 840-6660

v3 Aug 23, 2010